



## FLUXX® Dispensing Taps

Series AH 13

### FLUXX® Dispensing Taps AH 13 mm

The innovative FLUXX® Dispensing Taps for a variety of containers perfectly facilitate the easy, fast and clean decanting of liquids without gurgling.

The narrow outlet supports the accurate and clean dosing – especially in bottles with small threaded necks.

### Broad product program

Our FLUXX® Dispensing Taps are suitable for all containers – bottles, canisters, drums and IBC's – with common thread sizes ranging from DIN 38 to DIN 61.

### Unique ventilation system

The outstanding flow properties are based on the unique ventilation system from SABEU. Thanks to this, FLUXX® Dispensing Taps AH 13 series have a high flow rate of > 1.5 L / min.

### No leaking

FLUXX® Dispensing Taps have a high impermeability even with aggressive chemicals and strongly seeping liquids.

### Declaration of Conformity

All raw materials and additives used during the production process are fit for human consumption under the food law as well as from a physiological point of view and comply with Regulation EU no. 10/2011 and EC no. 1935/2004 as well as the Foodstuffs and Animal Feed Code.

#### Benefits

- Easy, fast and clean dispensing without gurgling
- Available for all common thread sizes
- Drip-off edge for clean dosing
- Smooth moving lever for easy operability
- Beveled outlet for convenient decanting – even in narrow bottle necks
- High flow rates
- Resistance to a multitude of chemicals
- Fit for human consumption under the food law


#### Applications

##### Decanting especially of:

- Liquid food
- Hygiene and care products
- Cleaners
- Agrochemicals
- Lubricants, engine and gear oil
- Industrial chemicals



## Product program

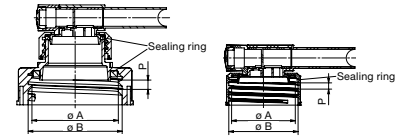

Description	Picture	Item number	Quantity per carton	Dimensions
AH 13/61 for DIN 61 thread		406 133	200 pieces	ØA 55.6 mm / ØB 60.5 mm P= 6 mm (pitch)
AH 13/51 for DIN 51 thread		405 133	250 pieces	ØA 50.2 mm / ØB 54.8 mm P= 5 mm (pitch)
AH 13/50 for DIN 50 thread		405 232	250 pieces	ØA 46.1 mm / ØB 50.1 mm P= 4 mm (pitch)
AH 13/45 for DIN 45 thread		404 133	650 pieces	ØA 41.0 mm / ØB 44.6 mm P= 4 mm (pitch)
AH 13/40 for DIN 40 thread		403 133	750 pieces	ØA 38.8 mm / ØB 42.2 mm P= 4 mm (pitch)
AH 13/38 for DIN 38 thread		402 144	750 pieces	ØA 36.1 mm / ØB 37.9 mm P= 3 mm (pitch)

Customizations (engraving/embossing – e.g. company logo) are available upon request.

Materials	
Housing, cover cap, reducing cap, adapter:	Polyethylene (PE)
Lever, cap nut:	Polypropylene (PP)
Sealing ring for cap nut:	EPE

Colors	
Cap nut:	Red / Black
Lever, cover cap:	Red
Housing, adapter, reducing cap:	Natural

Other colors are available upon request.

## Chemical resistance

We can not guarantee comprehensive chemical resistance of specific applications.

We recommend individual testing of customer applications prior to use.