

FLUXX®-Dispensing Taps AH 13

The patented FLUXX®-Dispensing Taps for various containers are perfectly suitable for the simple, quick and clean decanting of fluids without gurgling. The narrow outlet spout supports clean and precise dosing especially in bottles with small threaded necks.

Broad Product Program

FLUXX®-Dispensing Taps are available for all common industrial containers with standardized thread sizes ranging from DIN 36 to DIN 61 and with 3/4" BSP-Thread.

Patented Venting System

The outstanding flow properties are based on the patented ventilation system. Thanks to this FLUXX®-Dispensing Taps AH 13 have a high flow rate of >1.5L/min.

No Leaking

FLUXX®-Dispensing Taps are leakproof even with aggressive chemical compounds and strongly creeping fluids.

Declaration of Conformity

All components used in the production process are uncritical in regards to Commission Directive 2002/72/EC, the Commission Regulation (EU) No 10/2011, the Regulation (EC) No 1935/2004 and the German "Lebensmittel- und Futtermittel Gesetzbuch (LFBG)".



Example




Benefits

- **Fast, quick and clean** dispensing without gurgling
- Available for **all common thread sizes**
- **Chamfered outlet spout** for clean dispensing
- **Smooth moving lever** for easy use
- **Narrow outlet spout** for convenient decanting in small threaded necks
- **Flow rate** of more than 1.5 L/min
- **High chemical resistance**
- **Uncritical for food contact**

Applications

Dispensing especially of

- industrial chemicals
- cleaners
- disinfectants
- agrochemicals
- liquid food
- lubricants, engine & gear oil
- water

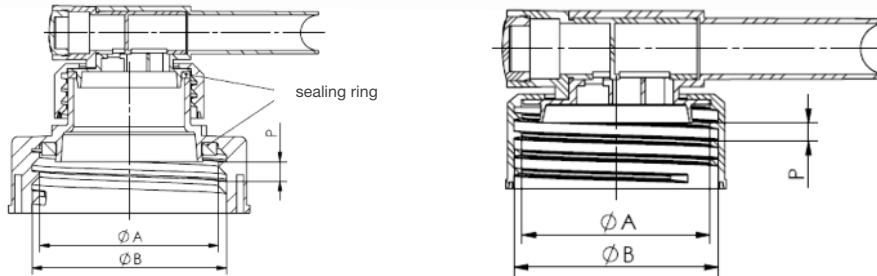

Description	Illustration	Item Number	Pack Quantity	Dimensions
AH 13/61 for DIN 61 thread		406 133	200 pieces	Ø A 55,6 mm / Ø B 60,5 mm P = 6 mm (pitch)
AH 13/51 for DIN 51 thread		405 133	250 pieces	Ø A 50,2 mm / Ø B 54,8 mm P = 5 mm (pitch)
AH 13/50 for DIN 50 thread		405 232	250 pieces	Ø A 46,1 mm / Ø B 50,1 mm P = 4 mm (pitch)
AH 13/45 for DIN 45 thread		404 133	650 pieces	Ø A 41,0 mm / Ø B 44,6 mm P = 4 mm (pitch)
AH 13/40 3/4" with 3/4" external thread		403 183	500 pieces	R 3/4" BSP thread
AH 13/40 for DIN 40 thread		403 133	750 pieces	Ø A 38,8 mm / Ø B 42,2 mm P = 4 mm (pitch)
AH 13/38 for DIN 38 thread		402 133	750 pieces	Ø A 34,6 mm / Ø B 36,6 mm P = 9 mm (pitch)
AH 13/36 for DIN 36 thread		401 133	750 pieces	Ø A 33,2 mm / Ø B 35,6 mm P = 3,6 mm (pitch)

Customized production on request

Chemical Resistance



Acids, bases, inorganic salts, alcohols, amines



Ester, ketones, aldehydes, aromatic compounds, fuels, fats, oils, ether, paraffin hydrocarbons



Oxidizing compounds, halogens, halogen alkane



= resistant



= limited resistant



= non-resistant

The collection contains examples and is not complete.

Please contact us for additional details.

Please note

We cannot guarantee comprehensive chemical resistance of specific applications. We recommend testing of actual application prior to use. Please contact our technical service for any further questions.

Materials

Housing, cover cap, reducing cap, adapter: polyethylene (PE)

Lever, screw cap: polypropylene (PP)

EPE-sealing ring: LD-PE foam (Alveocel)

Colors

Screw cap: red (black)

Lever & cover cap: red

Housing & adapter: nature

Reducing cap: nature

(other colors on request)

SABEU GmbH & Co. KG

ALTENLOH, BRINCK & CO - GRUPPE

Detlev-K.-Rohwedder-Str. 10 • 37154 Northeim • Germany

Phone: +49 (0) 5551 9101-00 • Fax: +49 (0) 5551 9101-220

sales@sabeu.com • www.sabeu.com